



汽油机零部件图册

PARTS CATALOGUE

LC165F · LC165FD

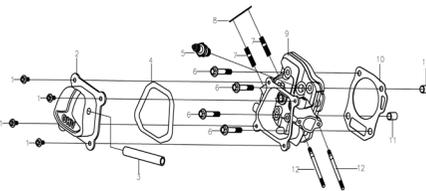
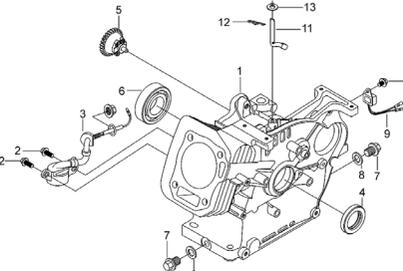
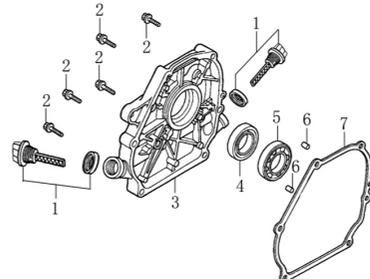
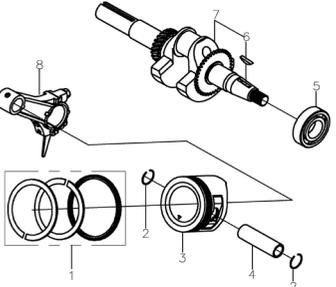
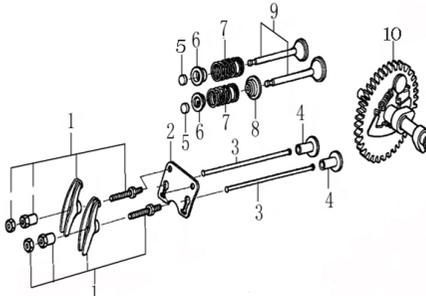
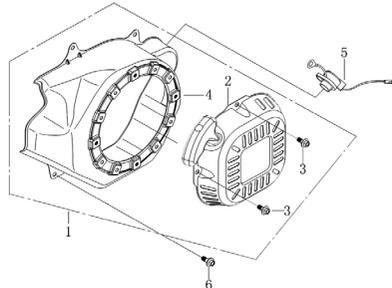
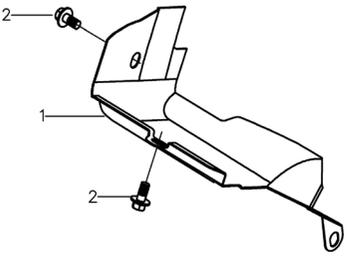
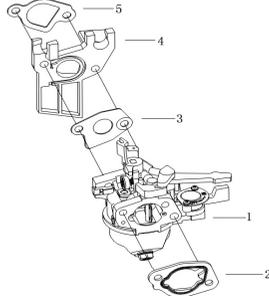
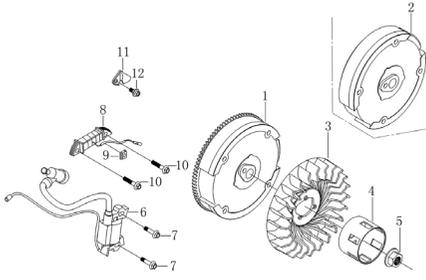
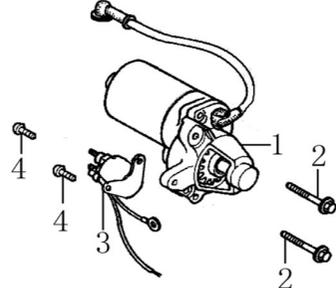
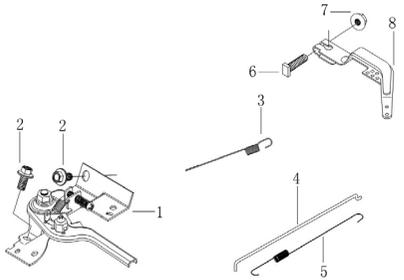
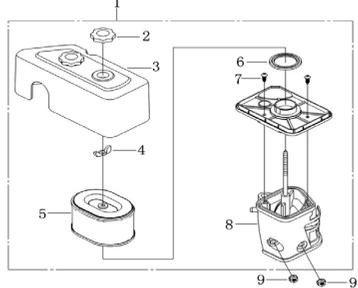
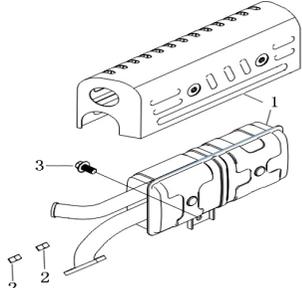
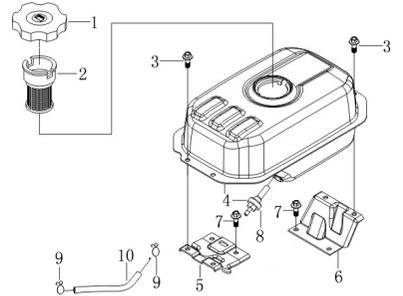
LC170F · LC170FD




Version number: LC/LT-2016-A

隆鑫通用动力股份有限公司


LONCIN MOTOR CO.,LTD.

| (CYLINDER HEAD) | (CRANK CASE) | (CRANK CASE COVER) | (CRANKSHAFT/PISTON) |
|---|--|--|--|
|  |  |  |  |
| (GAS DISTRIBUTION ADJUSTMENT) | STARTER SUBASSEMBLY) | (DIVERSION ASSY.) | (CARBURETOR) |
|  |  |  |  |
| (FLYWHEEL/COIL ASSY.) | (STARTER MOTOR) | (CONTROL SYSTEM) | (AIR CLEANER) |
|  |  |  |  |
| (MUFFLER) | (FUEL TANK) | | |
|  |  | | |

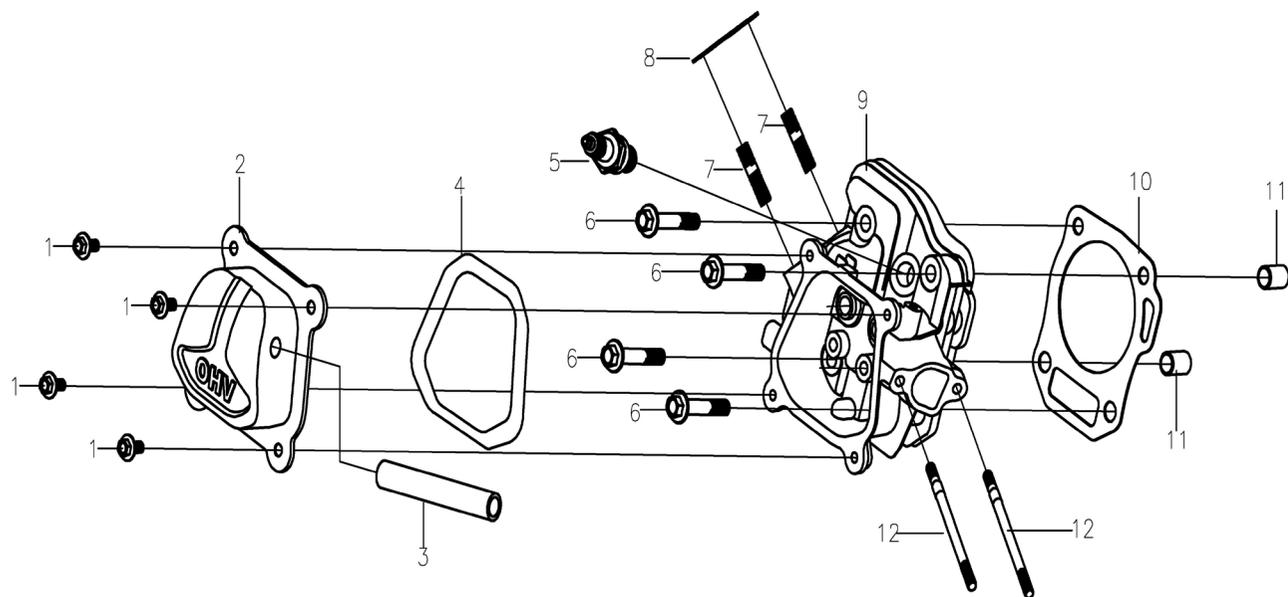


(CYLINDER HEAD)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|---------------------|-----------|-----------|
| 1 | 380140215-0003 | BOLT,FLANGE, 6×14 | 4 | 4 |
| 2 | 120220022-T150 | COVER COMP.,HEAD | 1 | 1 |
| 3 | 380740471-T040 | TUBE,BREATHER | 1 | 1 |
| 4 | 120250013-T040 | PACKING,HEAD COVER | 1 | 1 |
| 5 | 270960014-0001 | PLUG,SPARK F7RTC | 1 | 1 |
| 6 | 380140336-0001 | BOLT,FLANGE , 8×60 | 4 | 4 |
| 7 | 380180098-T040 | BOLT,STUD,EX. | 2 | 2 |
| 8 | 180650077-T150 | GASKET,EX.PIPE | 1 | 1 |
| 9 | 120080333-T150 | HEAD COMP.,CYLINDER | - | 1 |
| | 120080370-T210 | HEAD COMP.,CYLINDER | 1 | - |
| 10 | 120150107-T150 | GASKET,CYLINDER | - | 1 |
| | 120150124-T210 | GASKET,CYLINDER | 1 | - |
| 11 | 380600117-T040 | PIN,DOWEL | 2 | 2 |
| 12 | 380180089-T351 | BOLT,STUD,IN | 2 | 2 |

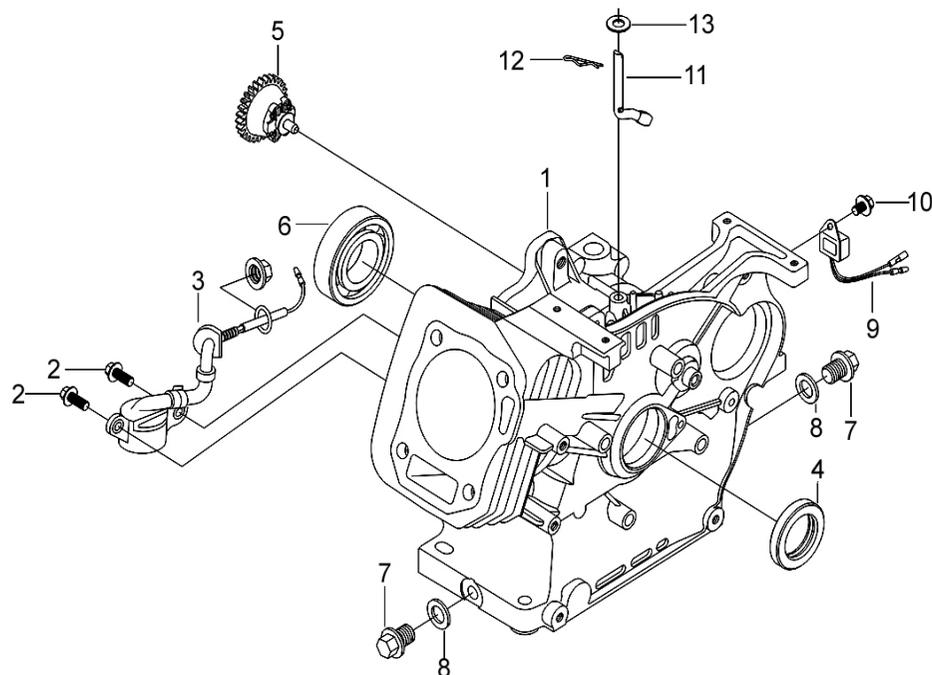


(CRANK CASE)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|---------------------|-----------|-----------|
| 1 | 110810044-T150 | CRANK CASE | - | 1(-) |
| | 110810074-T151 | CRANK CASE | - | -(1) |
| | 110810071-T210 | CRANK CASE | 1(-) | - |
| | 110810088-T211 | CRANK CASE | -(1) | - |
| 2 | 380140001-0006 | BOLT,FLANGE, 6×12 | 2 | 2 |
| 3 | 281850212-T150 | OIL LEVEL SWITCH | 1 | 1 |
| 4 | 380650347-T320 | OIL SEAL 25×41.25×6 | 1 | 1 |
| 5 | 171750002-T040 | GOVERNOR ASSY. | 1 | 1 |
| 6 | 380630137-0002 | BEARING,RADIAL BALL | 1 | 1 |
| 7 | 110260025-T040 | BOLT,DRAIN PLUG | 2 | 2 |
| 8 | 380450514-T040 | WASHER,DRAIN PLUG | 2 | 2 |
| 9 | 281890001-T040 | ALART UNIT,OIL | 1 | 1 |
| 10 | 380140001-0006 | BOLT,FLANGE, M6×12 | 1 | 1 |
| 11 | 171630001-T040 | SHAFT,GOVERNOR ARM | 1 | 1 |

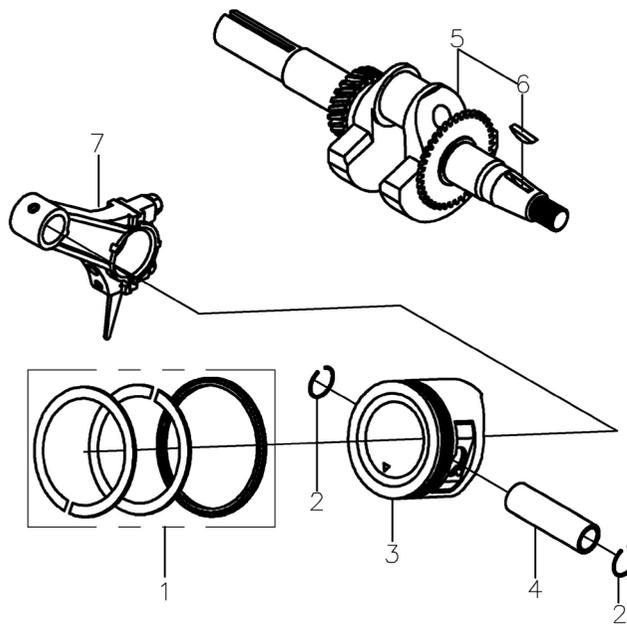


(CRANKSHAFT/PISTON)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|-----------------------|-----------|-----------|
| 1 | 130070142-T150 | RING SET | - | 1 |
| | 130070085-T320 | RING SET | 1 | - |
| 2 | 380560056-T040 | CLIP,PISTON PIN | - | 2 |
| | 380560055-T030 | CLIP,PISTON PIN | 2 | - |
| 3 | 130030160-T150 | PISTON | - | 1 |
| | 130030092-T320 | PISTON | 1 | - |
| 4 | 130060031-T040 | PIN , PISTON | - | 1 |
| | 130060030-T030 | PIN , PISTON | 1 | - |
| 5 | 130290178-T150 | CRANKSHAFT COMP(R) | 1 | 1 |
| 6 | 380620050-0001 | KEY | 1 | 1 |
| 7 | 130150054-T150 | ROD ASSY .,CONNECTING | - | 1 |
| | 130150062-T210 | ROD ASSY .,CONNECTING | 1 | - |
| | | | | |
| | | | | |

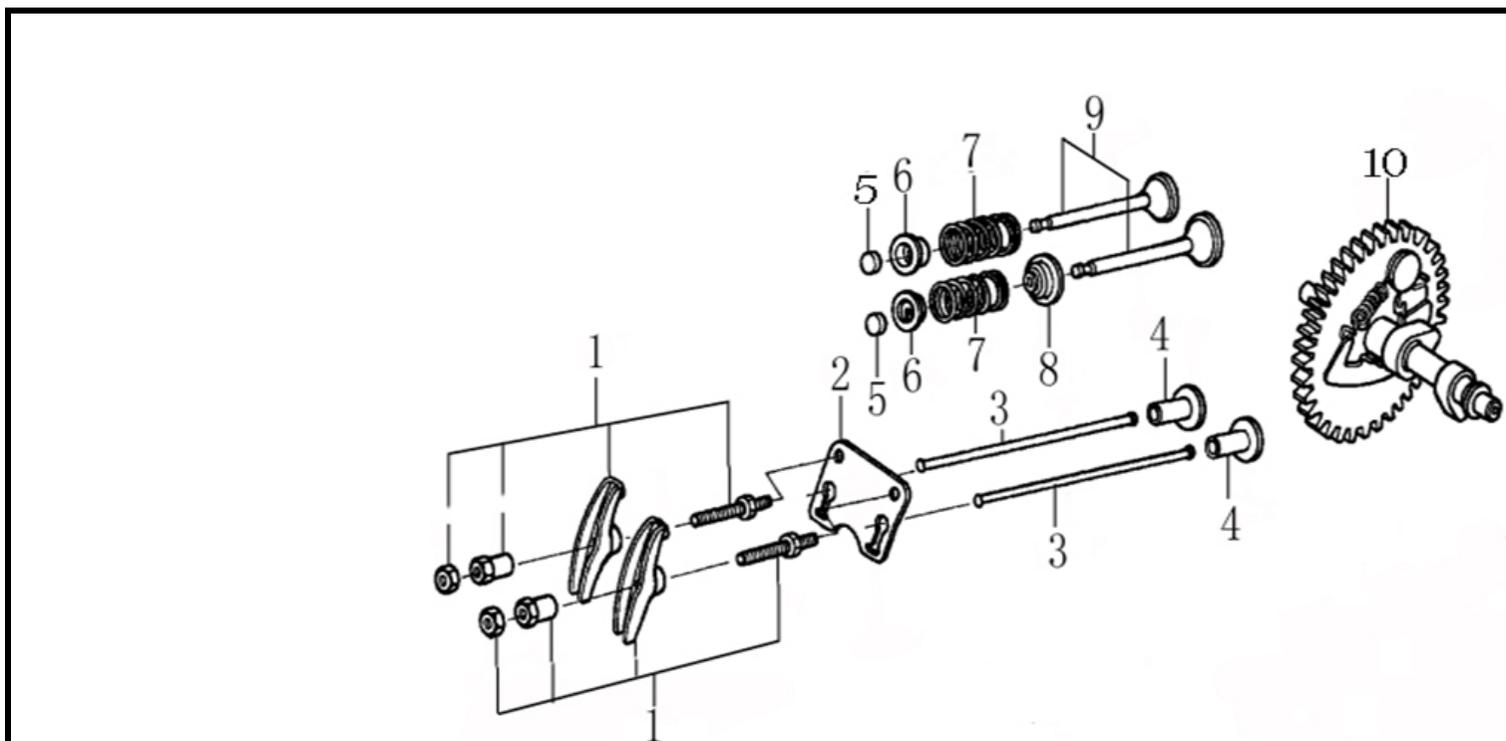


(GAS DISTRIBUTION ADJUSTMENT)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|-------------------------|-----------|-----------|
| 1 | 140450022-T040 | ARM ASSY. | 2 | 2 |
| 2 | 140710001-T040 | PLATE , PUSH ROD GUIDE | 1 | 1 |
| 3 | 140670004-T040 | ROD , PUSH | 2 | 2 |
| 4 | 140690003-T050 | LIFTER , VALVE | 2 | 2 |
| 5 | 140320001-T040 | RATATOR , VALVE | 2 | 2 |
| 6 | 140380017-T040 | RETAINER , VALVE SPRING | 2 | 2 |
| 7 | 140340022-T040 | SPRING , VALVE | 2 | - |
| | 140340039-T322 | SPRING , VALVE | - | 2 |
| 8 | 140400011-T040 | SEAL , GUIDE | 1 | - |
| | 140400016-T05K | SEAL , GUIDE | - | 1 |
| 9 | 500550041-T150 | VALVE | - | 1 |
| | 500550024-T040 | VALVE | 1 | - |
| 10 | 140020076-T050 | CAMSHAFT ASSY. | 1 | 1 |
| | | | | |

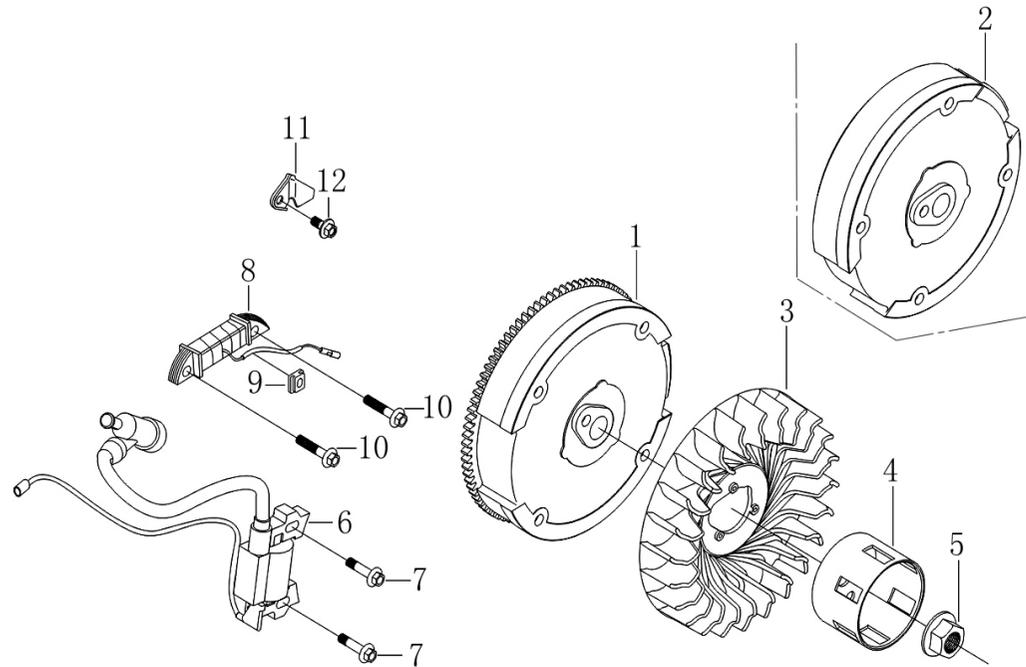


(FLYWHEEL/COIL ASSY.)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|----------------------|-----------|-----------|
| 1 | 270020140-T151 | FLYWHEEL COMP | -(1) | -(1) |
| 2 | 270020139-T150 | FLYWHEEL COMP | 1(-) | 1(-) |
| 3 | 160180023-T150 | FAN ,COOLING | 1 | 1 |
| 4 | 193590017-T150 | PULLEY ,STARTER | 1 | 1 |
| 5 | 380370051-0001 | NUT ,SPECIAL | 1 | 1 |
| 6 | 270920162-T040 | COIL ASSY .,IGNITION | 1 | 1 |
| 7 | 380140102-0004 | BOLT,FLANGE , M6×25 | 2 | 2 |
| 8 | 270190018-T111 | COIL ASSY.,CHARGE | -(1) | -(1) |
| 9 | 380930051-T151 | GROMMET,CORD | -(1) | -(1) |
| 10 | 380140102-0004 | BOLT ,FLANGE, M6×25 | -(2) | -(2) |
| 11 | 270280018-T151 | CLAMPER , CORD | -(1) | -(1) |
| 12 | 380140089-0003 | BOLT ,FLANGE, 6×8 | -(1) | -(1) |
| | | | | |
| | | | | |

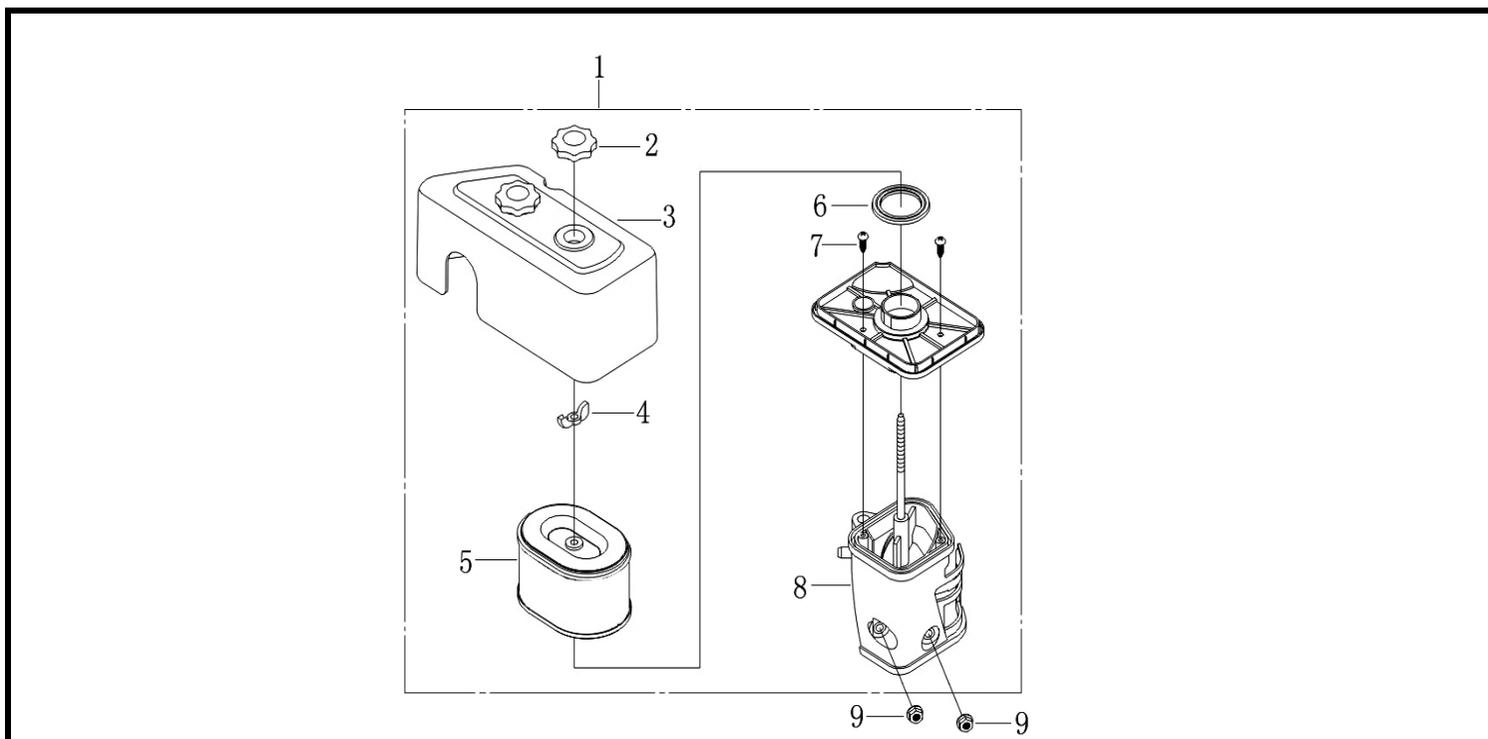


(AIR CLEANER)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|-----------------------------|-----------|-----------|
| 1 | 180020336-T150 | AIR CLEANER ASSY | 1 | 1 |
| 2 | 181950004-T190 | HANDEL,AIR CLEANER BOLT. | 1 | 1 |
| 3 | 180070133-T150 | COVER ,AIR CLEANER | 1 | 1 |
| 4 | 380440002-0001 | NUT ,TOOL BOX SETTING | 1 | 1 |
| 5 | 180100062-T150 | ELEMENT ASSY. , AIR CLEANER | 1 | 1 |
| 6 | 380840437-T040 | PACKING ,ELBOW | 1 | 1 |
| 7 | 380310015-0005 | SCREW | 2 | 2 |
| 8 | 180280022-T150 | ELBOW COMP., AIR CLEANER | 1 | 1 |
| 9 | 380370048-0001 | NUT,FLANGE, M6 | 2 | 2 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

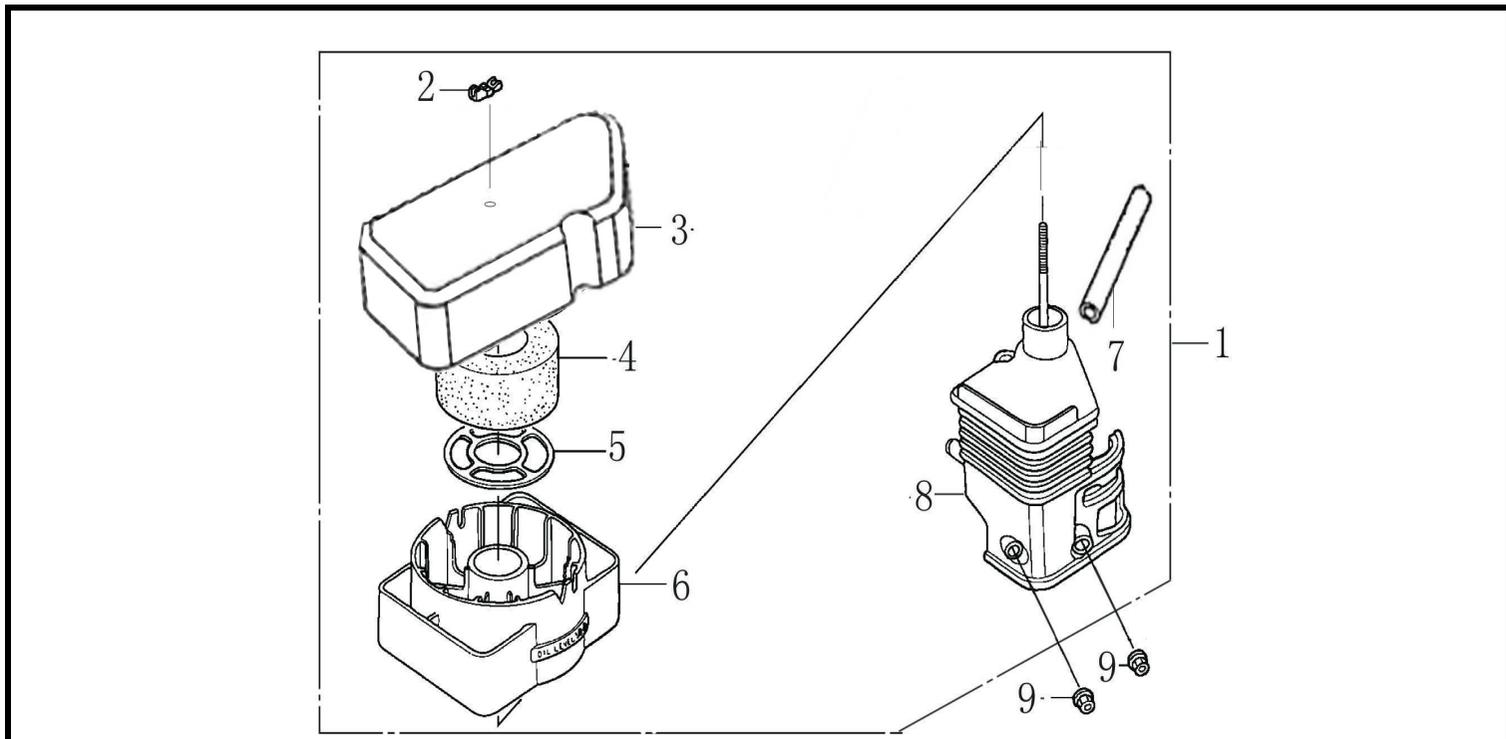


AIR CLEANER)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|----------------------------|-----------|-----------|
| 1 | 180020528-T150 | AIR CLEANER ASSY | 1 | 1 |
| 2 | 380440002-0001 | NUT ,TOOL BOX SETTING | 1 | 1 |
| 3 | 180070155-T150 | COVER ,AIR CLEANER | 1 | 1 |
| 4 | 180130202-T150 | ELEMENT ASSY., AIR CLEANER | 1 | 1 |
| 5 | 180330033-T150 | NOSE,SILENCER | 1 | 1 |
| 6 | 172580004-T150 | OIL CUP | 1 | 1 |
| 7 | 380740471-T040 | TUBE,BREATHER | 1 | 1 |
| 8 | 180280032-T150 | ELBOW COMP.,AIR CLEANER | 1 | 1 |
| 9 | 380370048-0001 | NUT ,FLANGE , M6 | 2 | 2 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

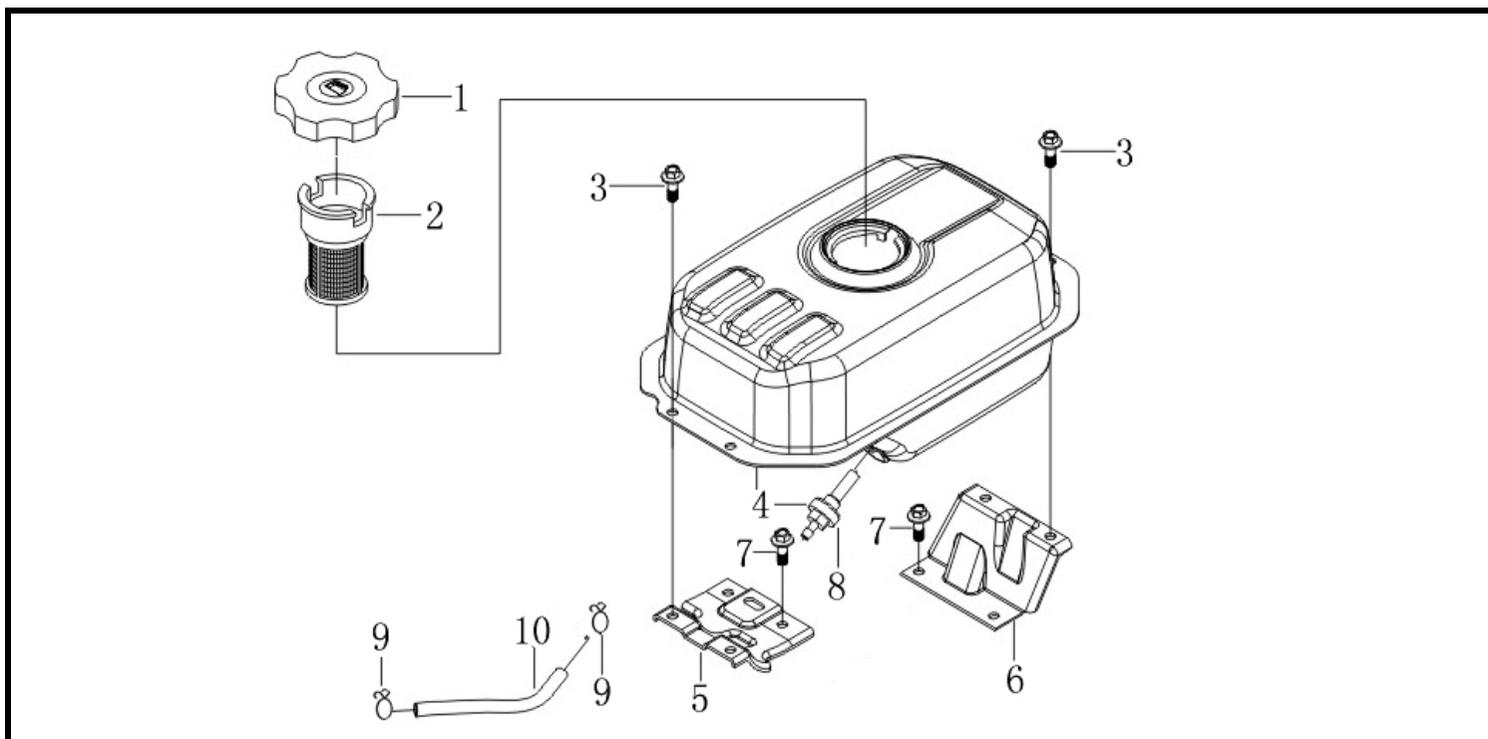

(FUEL TANK)

| Numer | Kod | Nazwa angielska | LC165F(D) | LC170F(D) |
|-------|----------------|---------------------------|-----------|-----------|
| 1 | 170870039-T040 | CAP COMP.,FUEL FILLER (A) | 1 | 1 |
| 2 | 170720003-T05J | FILTER ,FUEL | 1 | 1 |
| 3 | 380140001-0006 | BOLT , FLANGE , 6×12 | 4 | 4 |
| 4 | 170500641-T150 | TANK COMP.,FUEL | 1 | 1 |
| 5 | 172840003-T150 | HOLDER, FUEL TANK | 1 | 1 |
| 6 | 172840002-T150 | HOLDER, FUEL TANK | 1 | 1 |
| 7 | 380140215-0003 | BOLT ,FLANGE , 6×14 | 4 | 4 |
| 8 | 170660077-T040 | JOINT ASSY. , FUEL TANK | 1 | 1 |
| 9 | 380950188-T040 | CLIP , TUBE | 2 | 2 |
| 10 | 380750180-T040 | TUBE , FUEL | 1 | 1 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

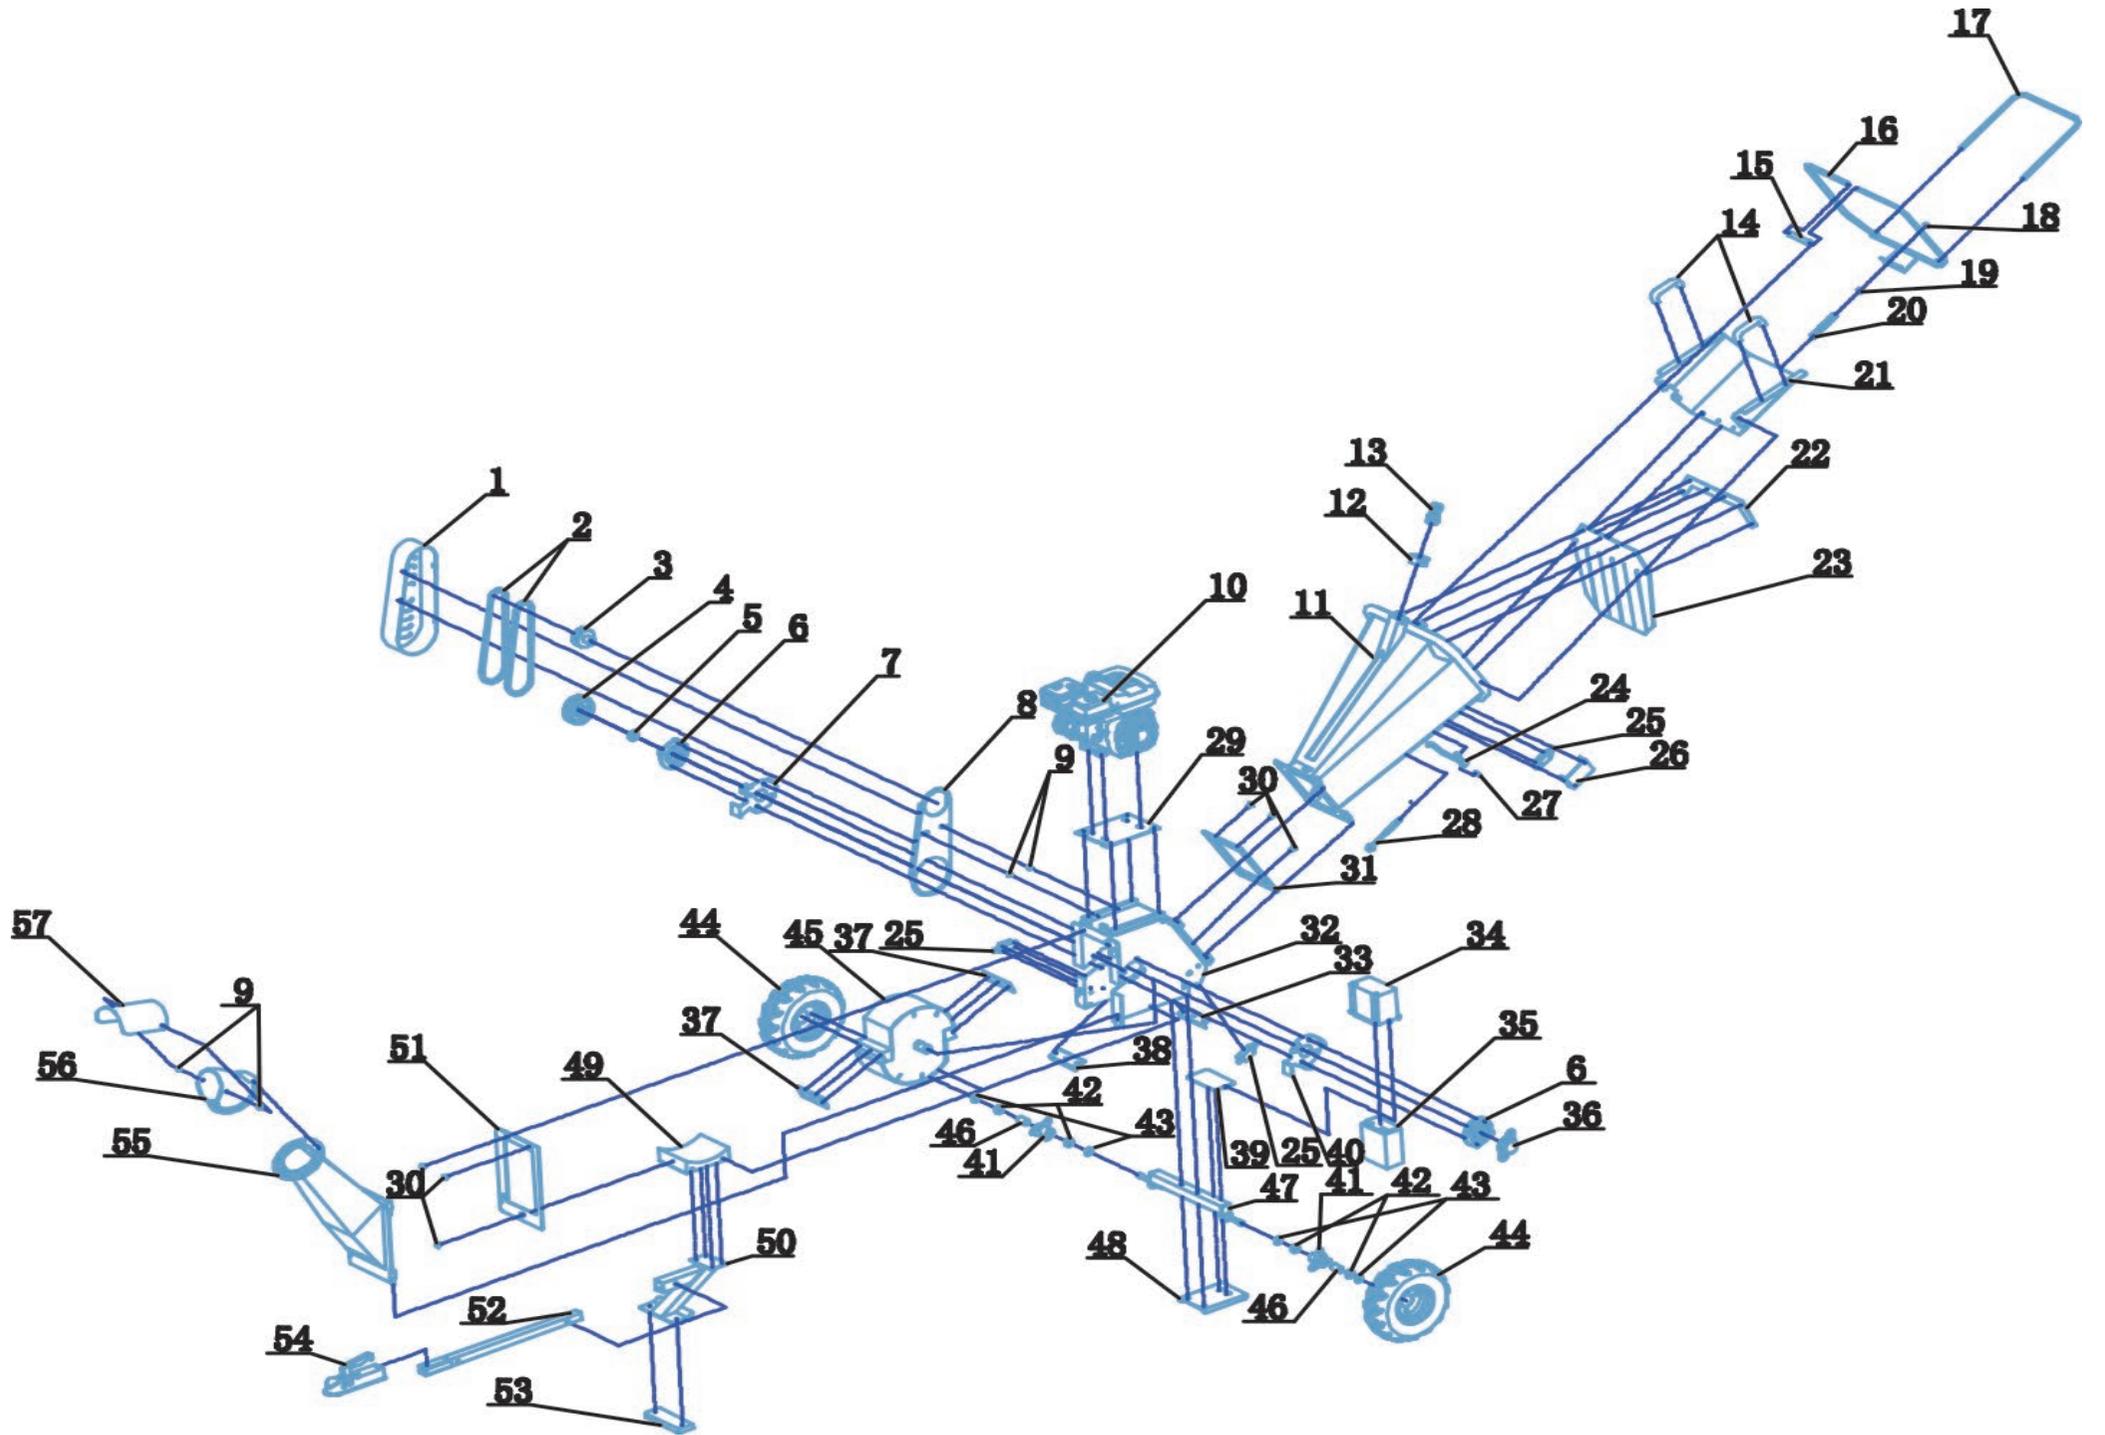

| Numer | Kod | Nazwa angielska | Ilość |
|-------|--------|-----------------------------------|-------|
| 1 | 530600 | BELT COVER | 1 |
| 2 | 530601 | BELT | 2 |
| 3 | 530602 | DRIVE PULLEY | 1 |
| 4 | 530603 | DRUM PULLEY | 1 |
| 5 | 530604 | SPACER | 1 |
| 6 | 530605 | BEARING | 1 |
| 7 | 530606 | SEAL PLATE | 7 |
| 8 | 530607 | INNER BELT COVER | 1 |
| 9 | 530608 | WASHER 8 | 2 |
| 10 | 530609 | ENGINE | 1 |
| 11 | 530610 | INFEED HOPPER | 1 |
| 12 | 530611 | PRESS SWITCH FIXATION | 1 |
| 13 | 530612 | PRESS SWITCH | 1 |
| 14 | 530613 | HANDLE | 2 |
| 15 | 530614 | FITTING PIPE | 1 |
| 16 | 530615 | EMERGENCY STOP FRAME | 1 |
| 17 | 530616 | EXTENSION PIPE | 1 |
| 18 | 530617 | M10 LOCK NUT | 1 |
| 19 | 530618 | M10 NUT | 1 |
| 20 | 530619 | COMPRESSION SPRING | 1 |
| 21 | 530620 | INFEED EXTENSION | 1 |
| 22 | 530621 | RUBBER LAYERING | 1 |
| 23 | 530622 | RUBBER | 1 |
| 24 | 530623 | RESTORE HANDLE | 1 |
| 25 | 530624 | KILL SWITCH | 1 |
| 26 | 530625 | SWITCH COVER | 1 |
| 27 | 530626 | EXTENSION SPRING | 1 |
| 28 | 530627 | GEAR PLATE | 1 |
| 29 | 530628 | ENGINE FIXATION PLATE | 1 |
| 30 | 530629 | SHOCK CUSHION HOLDS PLASTIC CLASP | 1 |
| 31 | 530630 | INFEED DAMPING PAD | 1 |
| 32 | 530631 | MAIN FRAME | 1 |
| 33 | 530632 | ANVIL SPACING BAR | 1 |
| 34 | 530633 | BATTERY BOX | 1 |
| 35 | 530634 | BATTERY | 1 |
| 36 | 530635 | BEARING COVERQ | 1 |
| 37 | 530636 | BLADE | 2 |
| 38 | 530637 | ANVIL | 1 |
| 39 | 530638 | BATTERY FASTEN BOARD | 1 |
| 40 | 530639 | BEARING HOLE COVER | 1 |
| 41 | 530640 | FLANGE | 1 |
| 42 | 530641 | BEARING | 2 |
| 43 | 530642 | BEARING SEAL | 2 |
| 44 | 530643 | WHEEL | 2 |
| 45 | 530644 | DRUM | 1 |
| 46 | 530645 | SPACE | 1 |
| 47 | 530646 | WHEEL AXLE | 1 |
| 48 | 530647 | BATTERY BASE PLATE | 1 |
| 49 | 530648 | ARCH BOARD | 1 |
| 50 | 530649 | FOREFOOT | 1 |
| 51 | 530650 | DISCHARGE DAMPING RUBBER | 1 |
| 52 | 530651 | TOW BAR | 1 |
| 53 | 530652 | FOOT RUBBER | 1 |
| 54 | 530653 | TOW HITCH | 1 |
| 55 | 530654 | DISCHARGE BOTTOM PART | 1 |
| 56 | 530655 | DISCHARGE TOP PART | 1 |
| 57 | 530656 | CHUTE ADJUST | 1 |